
INSTALLATION
Shower trays


INSTALLATION GUIDE

For the Belari gel-coat shower trays: **Arvi · Arvi Marco · Kora · Tamo · Rilo · Vesa · Olvi**. Not valid for Neo.

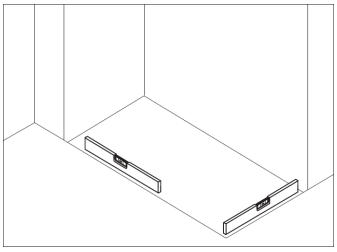


1 CLEAN AND LEVEL THE AREA

Clean and level the area where the shower tray will be installed.

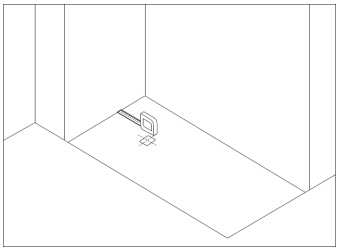

2 MEASURE AND MARK


Measure and mark the position of the drain.

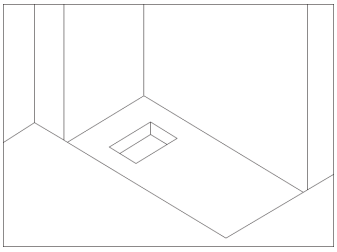

3 PREPARE THE BASE


Build the support base with a solid, consistent material such as mortar. It must be perfectly level over its whole surface.

Important: leave the hole for the drain valve.

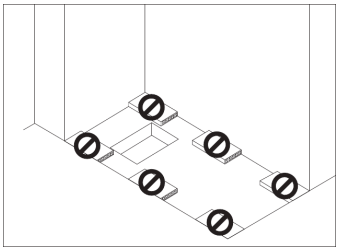

! DO NOT USE HOLLOW MATERIALS


Do not use perforated or non-solid materials, such as bricks, for the base.

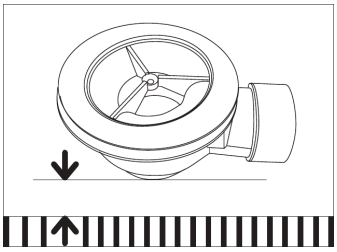

4 CONNECT THE DRAIN VALVE

Connect the drain valve.


Important: leave clearance under the valve so the tray does not warp upwards.

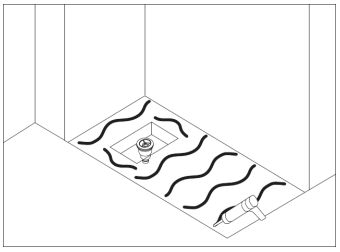

5 BOND THE TRAY


Bond the tray to the base with polyurethane sealant.

Important: do not use white cement or tile adhesive.

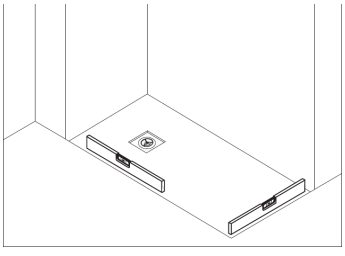

6 PLACE THE TRAY

Place and level the shower tray and fit the drain. Check that the water drains correctly and that the tray slopes towards the drain.

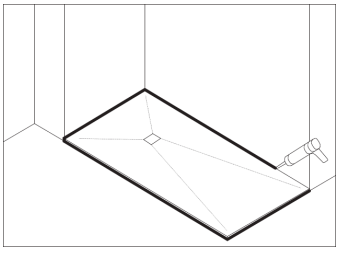

7 SEAL THE TRAY

Before tiling and laying the floor, seal the edges of the tray with polyurethane sealant.