INSTALLATION
Neo shower tray

INSTALLATION GUIDE

For the Belari **Neo** SMC shower tray. Choose the method that matches your floor.

SAFETY INFORMATION

Read and understand this guide before installing the shower tray.

Warning: if you have any doubt about a step in this guide, do not go ahead. If necessary, hire a certified plumber or a licensed contractor.


Caution: open the box carefully so as not to damage the surface of the tray.

CARE AND MAINTENANCE


Wipe the surface with a damp cloth to remove water marks and stains. For ordinary stains, use a mild detergent or a general-purpose cleaner.

For corners and joints, use a mould cleaner.

Tools and materials

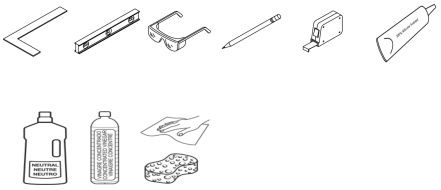



A1 INSTALLING INTO WOODEN FLOORS

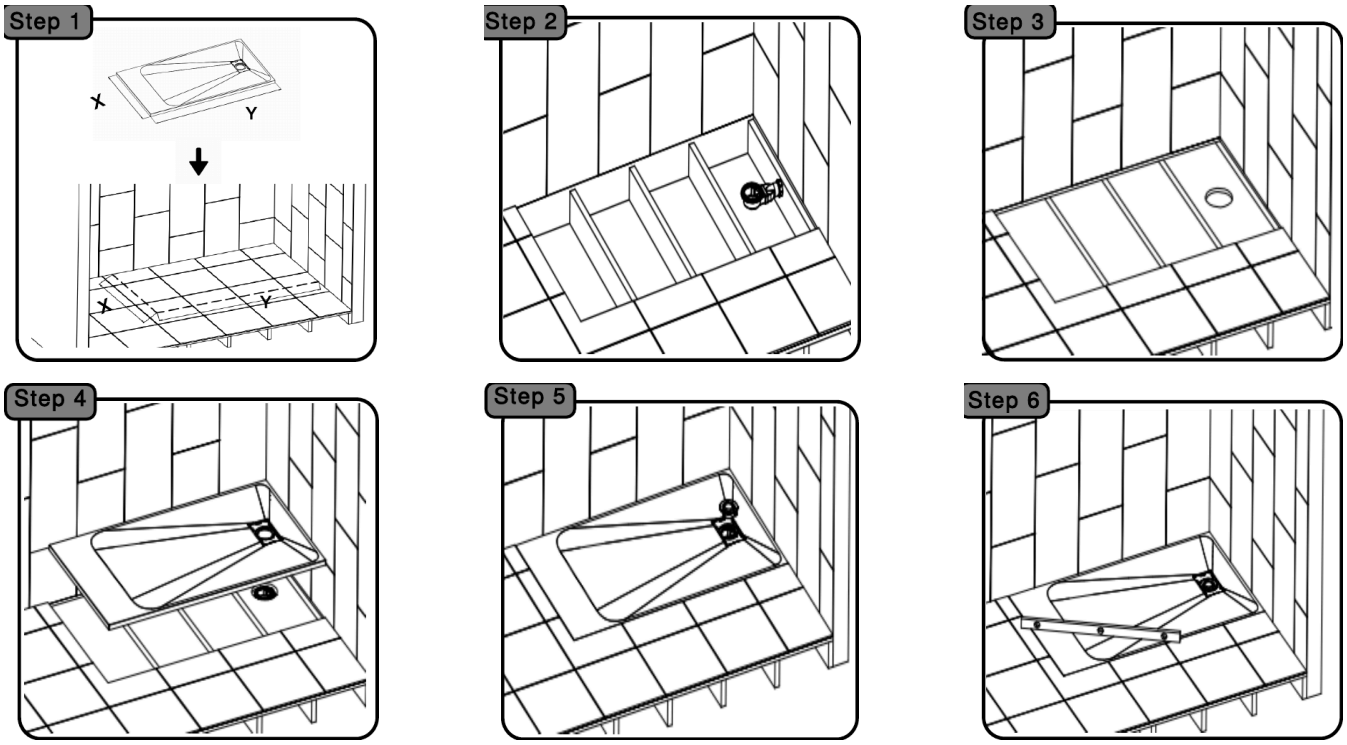



1. Keep the area for the shower tray free.
2. Fit the lower part of the drain and do a sealing test to make sure there are no leaks and that it is firmly fixed.
3. Lay the floor, or add wooden battens to make it firmer. If you lay the floor, leave a hole of 120 mm or more at the drain outlet.
4. Place the shower tray.
5. Fit the upper part of the drain.
6. Check with a spirit level that the tray is horizontal. Do a drainage test: the waste pipe must be clear and no water may remain on the surface. Do not use the tray until the silicone has dried.


A2 INSTALLING INTO TILE FLOORS

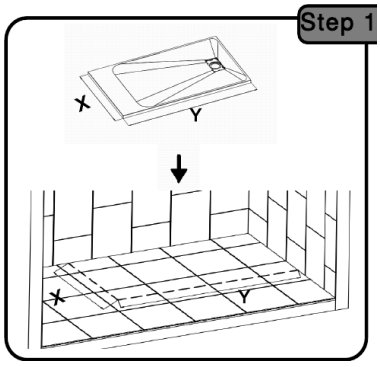


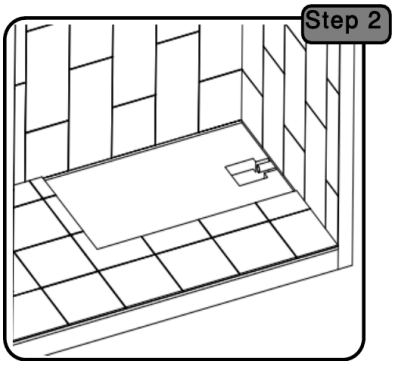

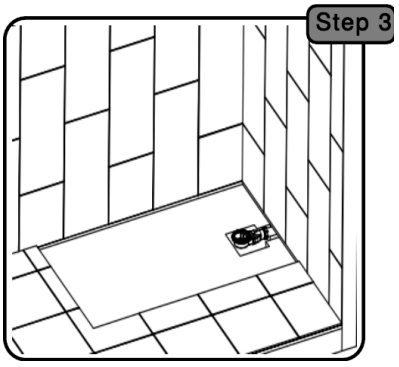

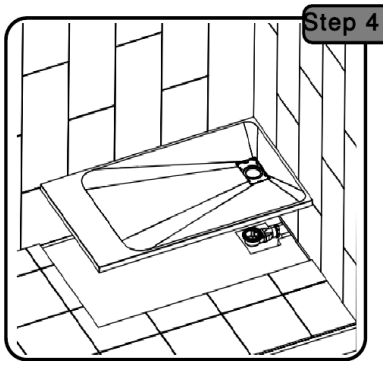


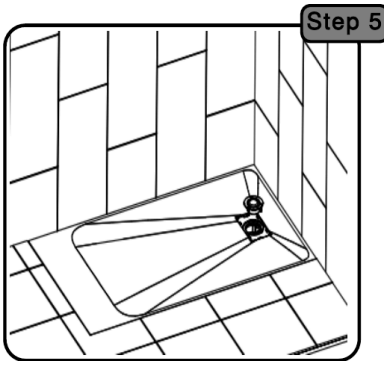


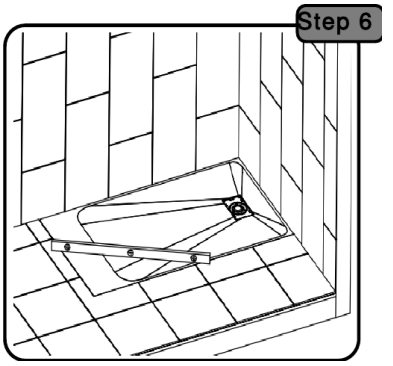



1. Keep the area for the shower tray free.
2. Measure and mark the position of the drain.
3. Fit the lower part of the drain and do a sealing test to make sure there are no leaks and that it is firmly fixed.
4. Place the shower tray.
5. Fit the upper part of the drain.
6. Check with a spirit level that the tray is horizontal. Do a drainage test: the waste pipe must be clear and no water may remain on the surface. Do not use the tray until the silicone has dried.

B INSTALLING ONTO CONCRETE OR WOODEN FLOORING

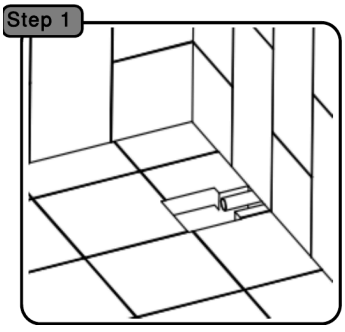

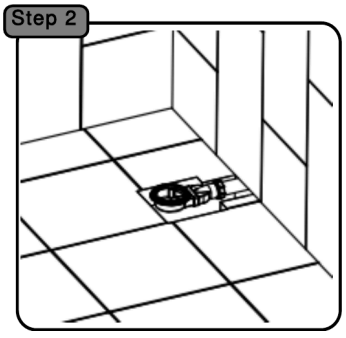

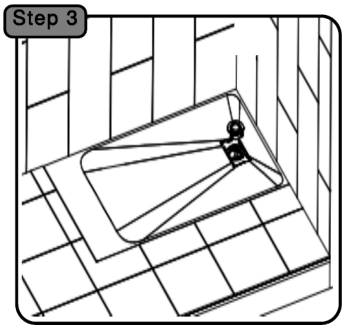

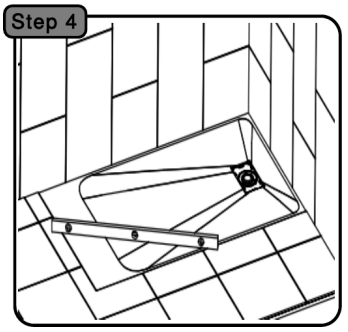

1. Measure and mark the position of the drain.
2. Fit the lower part of the drain and do a sealing test to make sure there are no leaks and that it is firmly fixed.
3. Place the shower tray and fit the upper part of the drain.
4. Check with a spirit level that the tray is horizontal. Do a drainage test: the waste pipe must be clear and no water may remain on the surface. Do not use the tray until the silicone has dried.

BEFORE USING THE AREA
Allow the shower tray to cure for 24 hours before working in the area.